

1




CARRE 160 O FORMATION

INSTALLING THE CORNERS


8x




8x

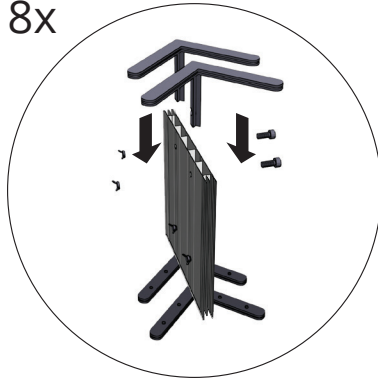

8x

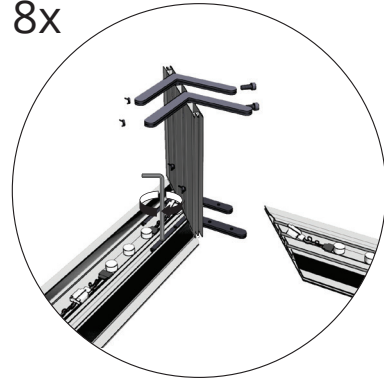


8x

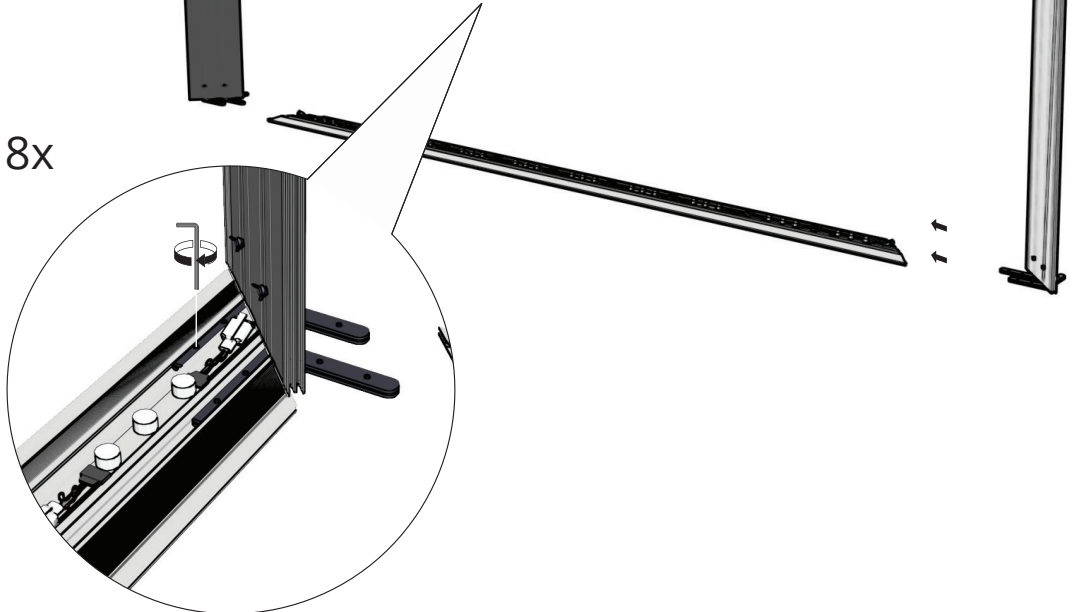


2

4x

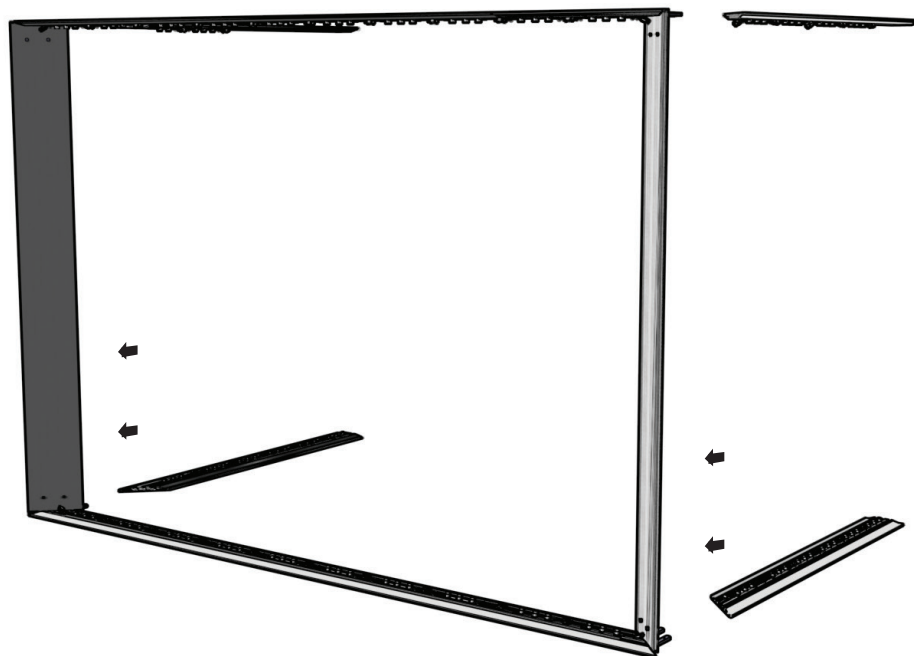


8x

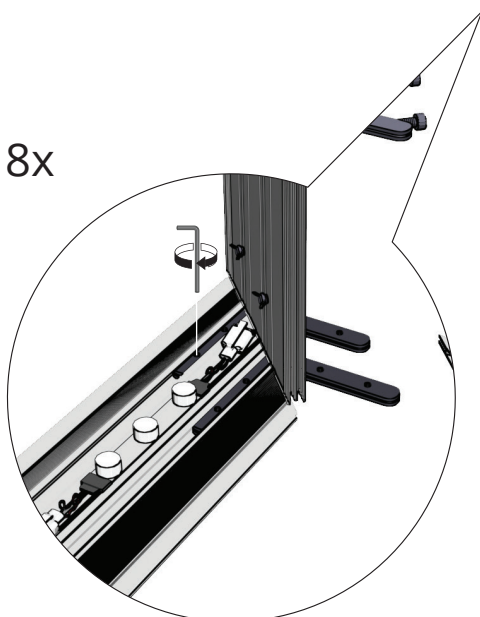


8x







8x

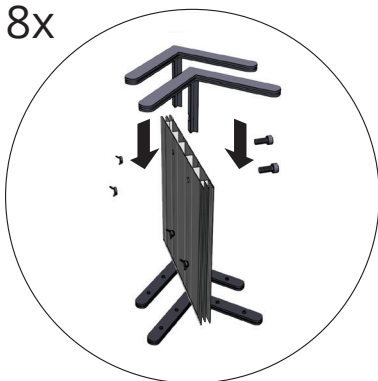


8x

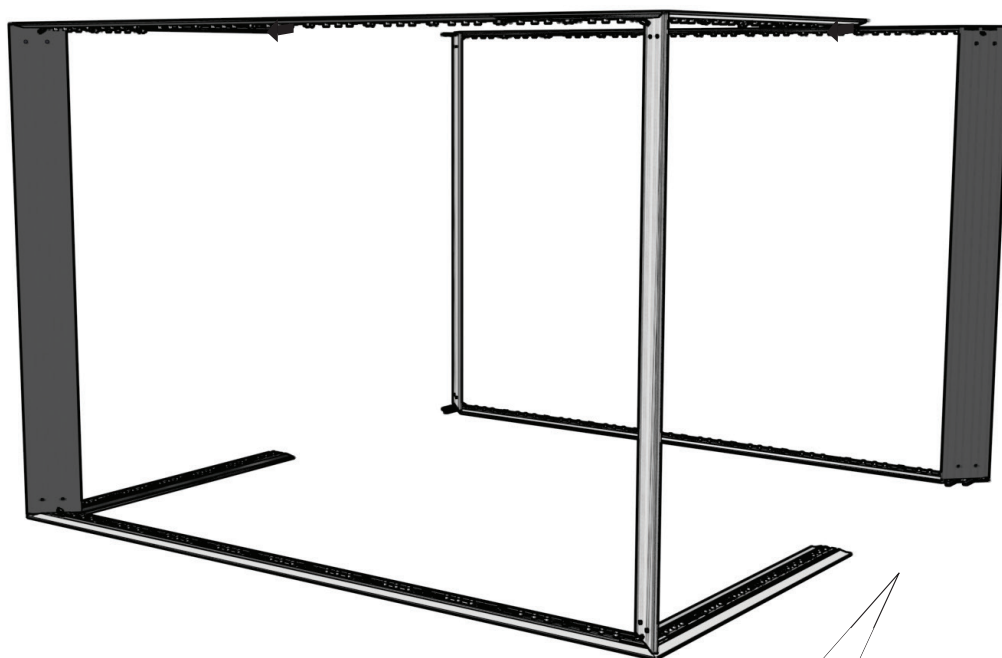





3

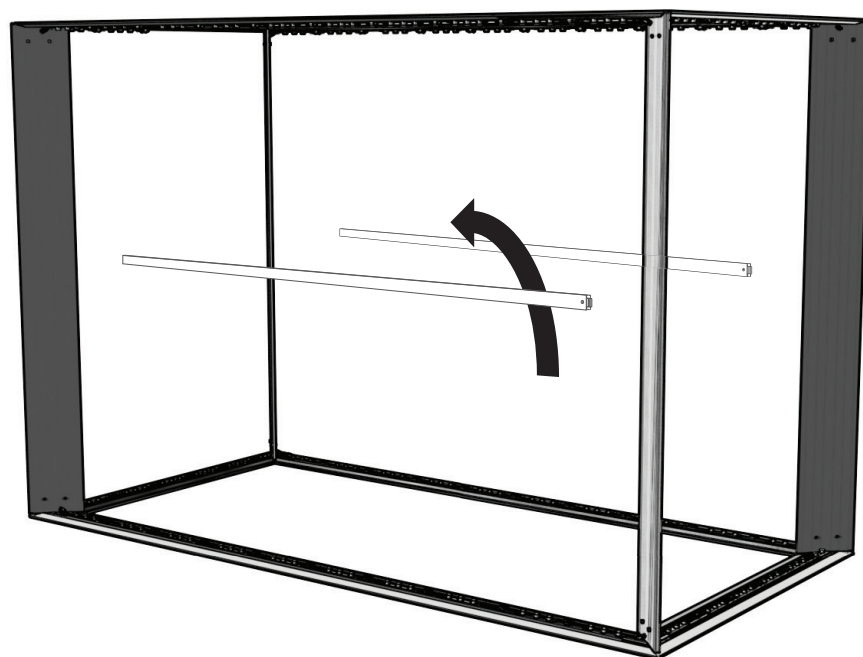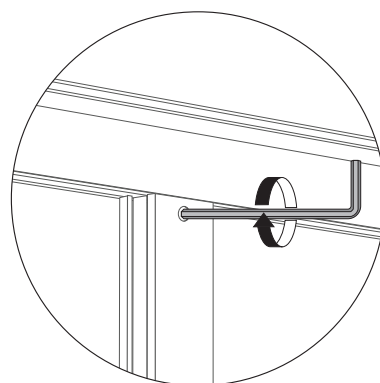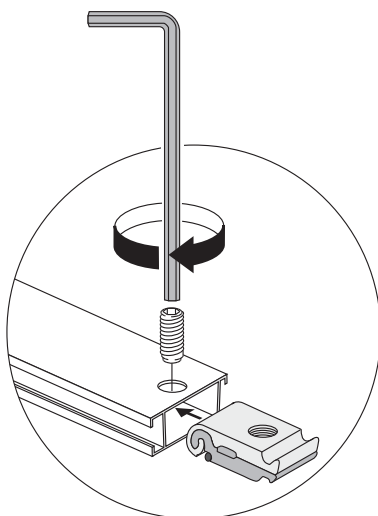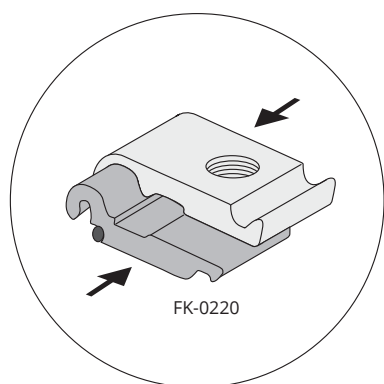


4

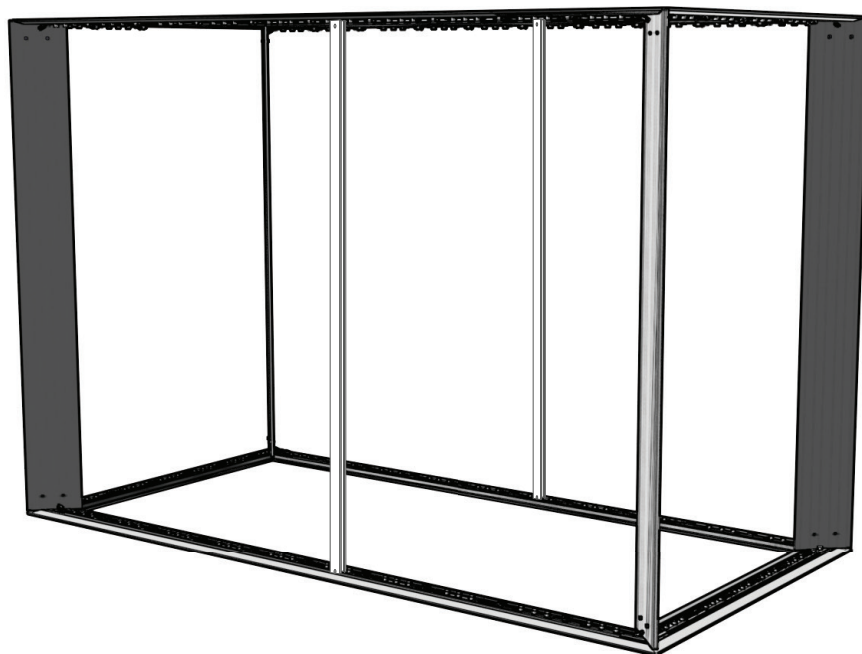

5

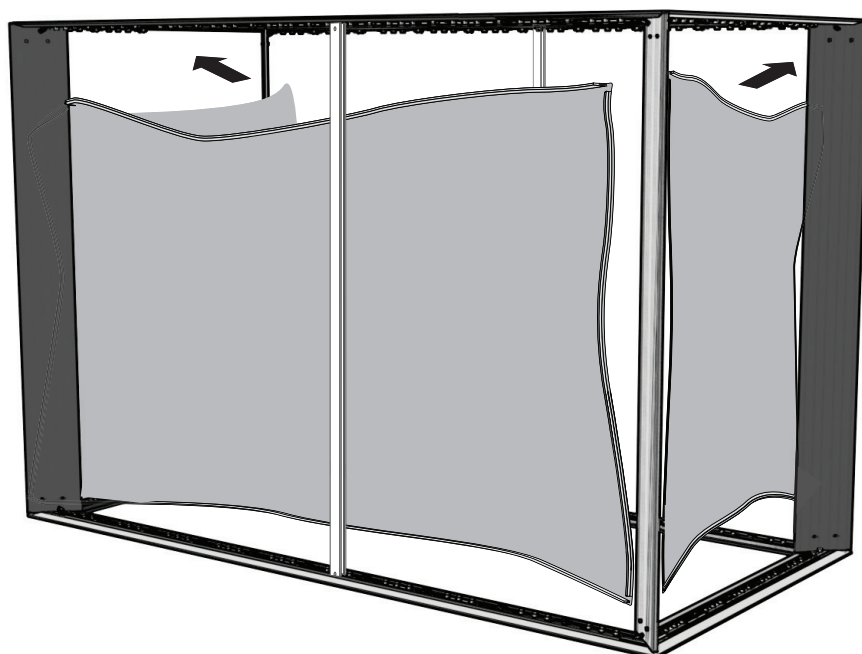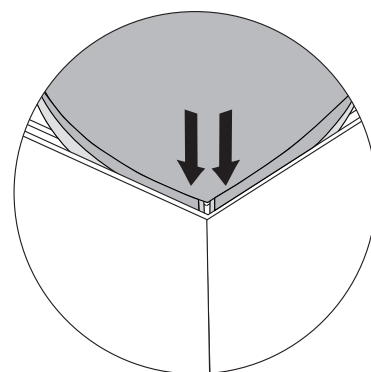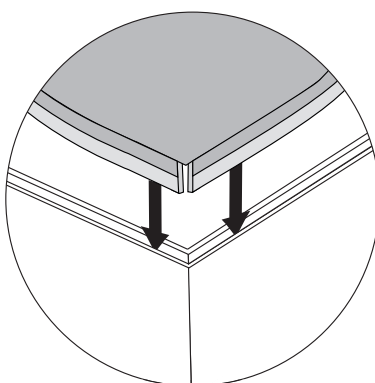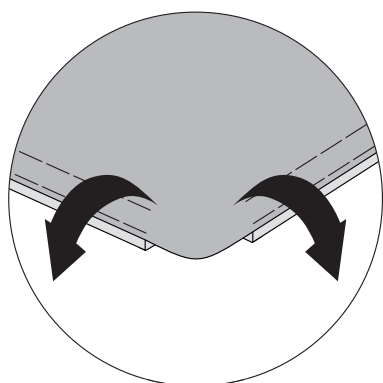

6

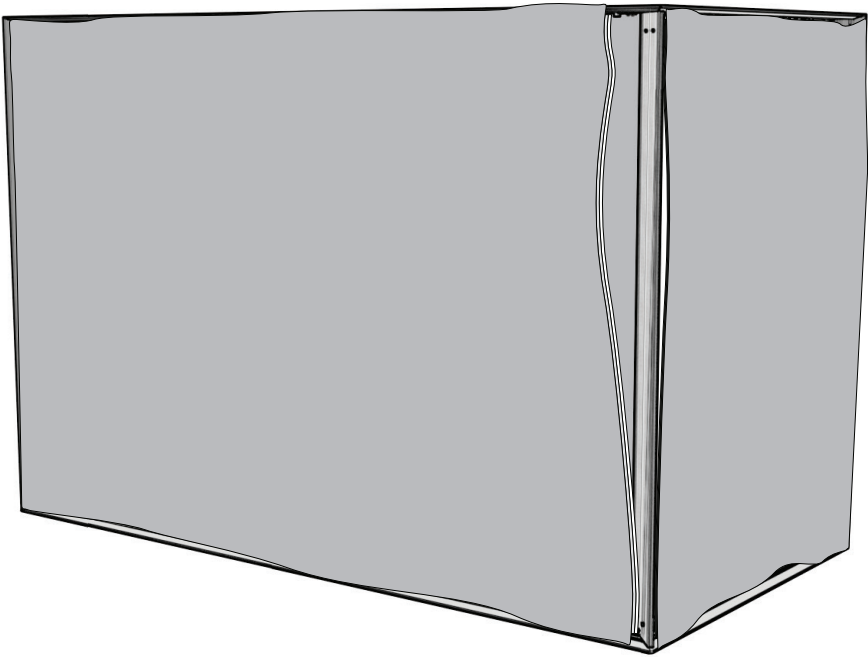

7

