


1

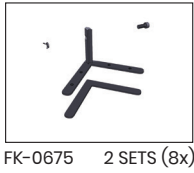


# CARRE 160 U FORMATION

## INSTALLING THE CORNERS

8x




8x

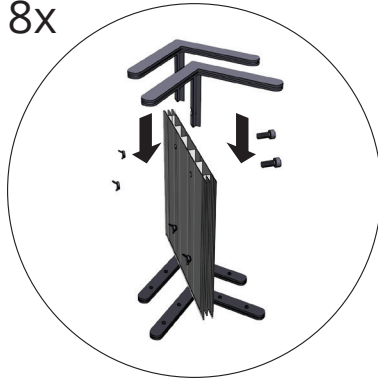

8x




8x

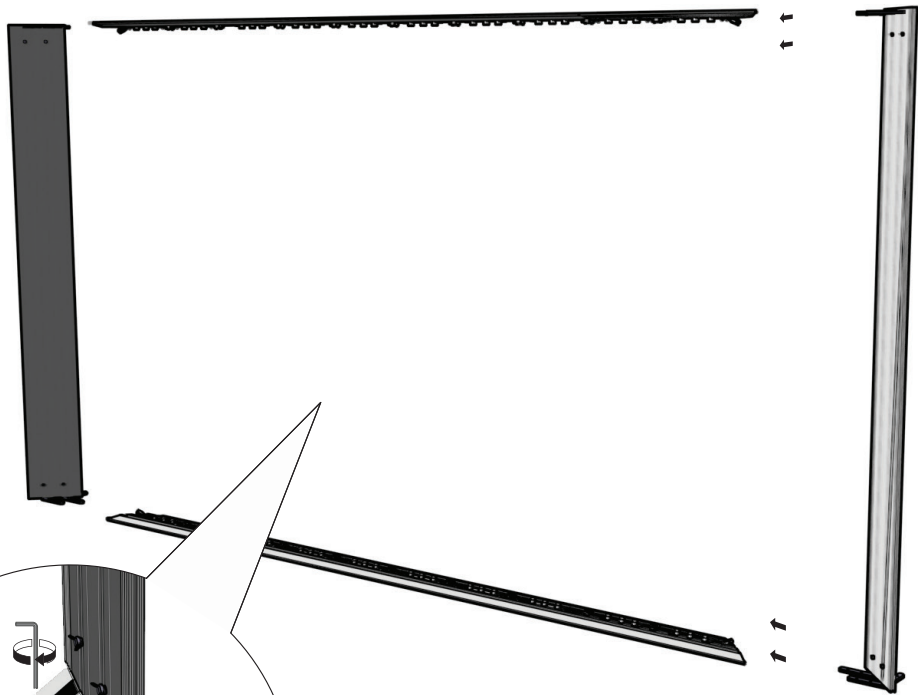



2

4x

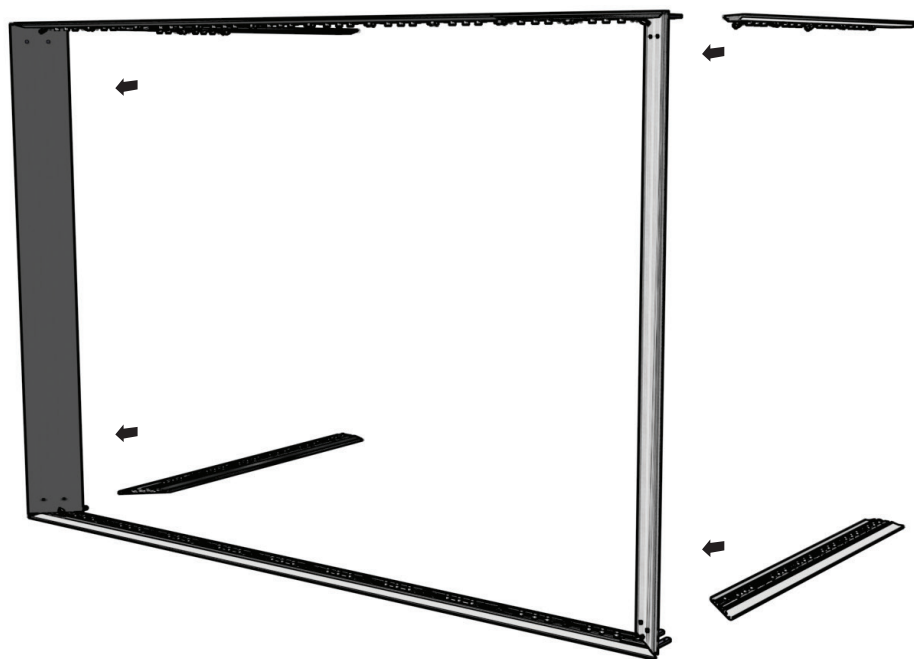





8x

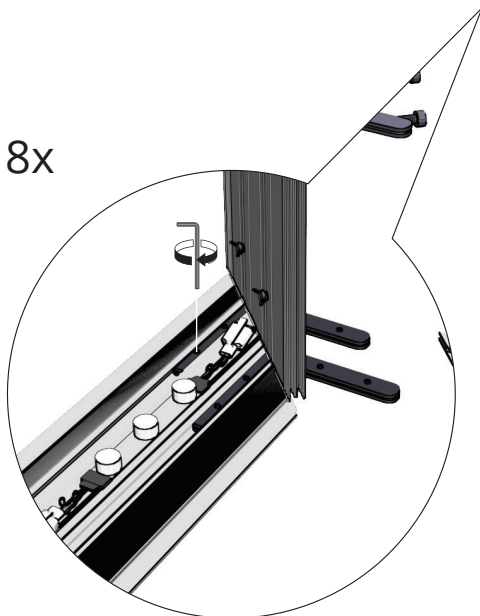




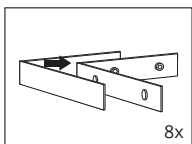


FK-1200


8x

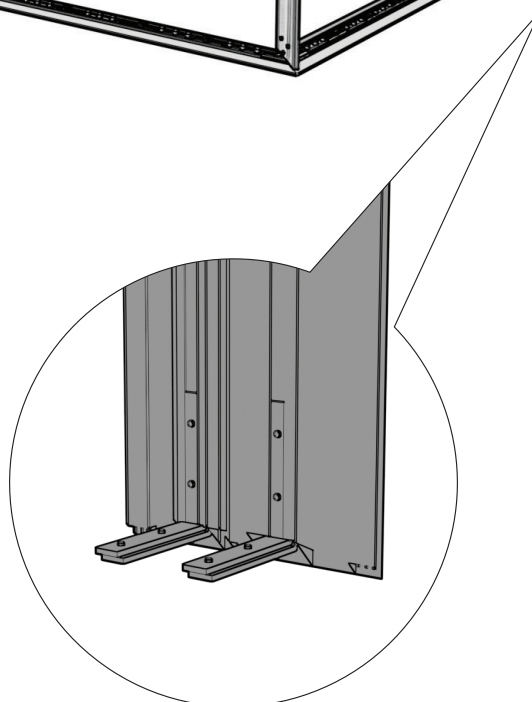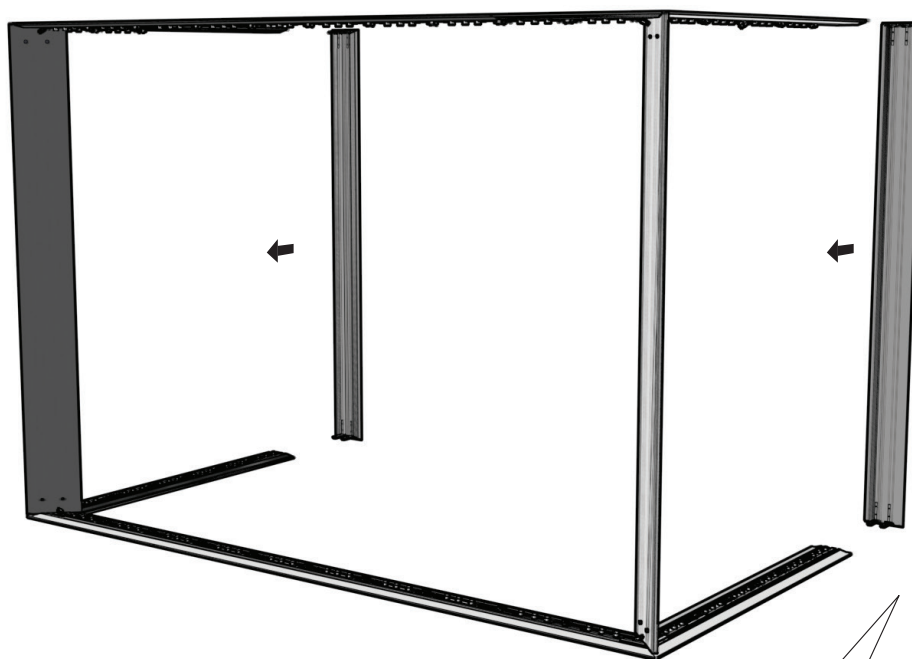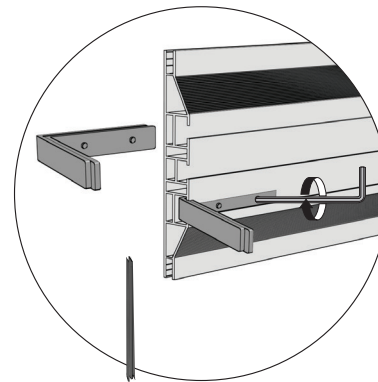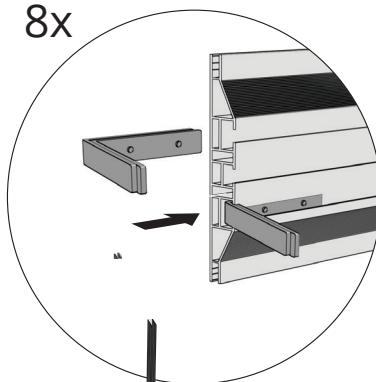





3

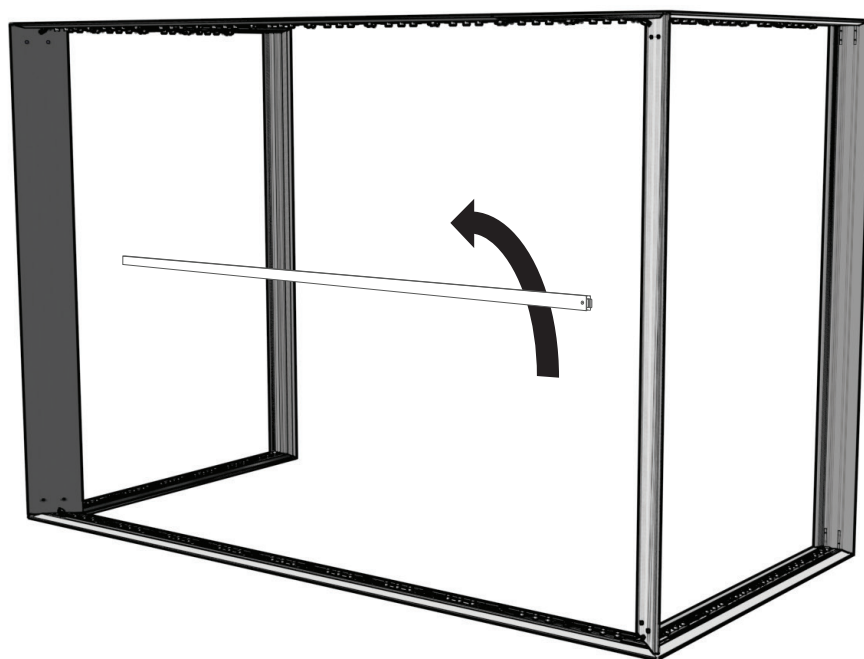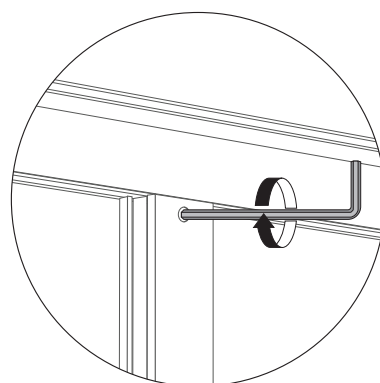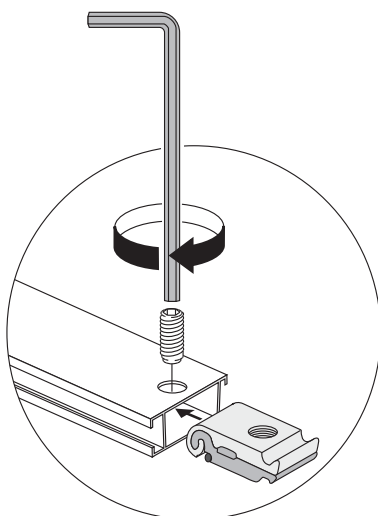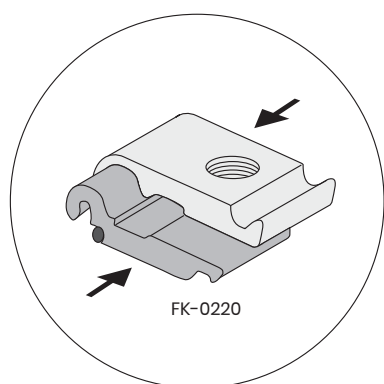


4

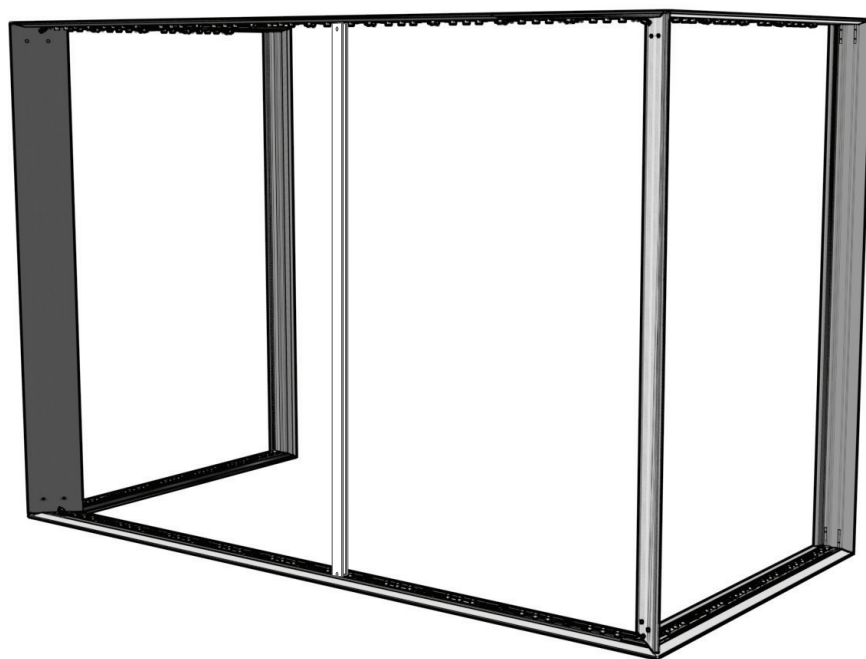

5

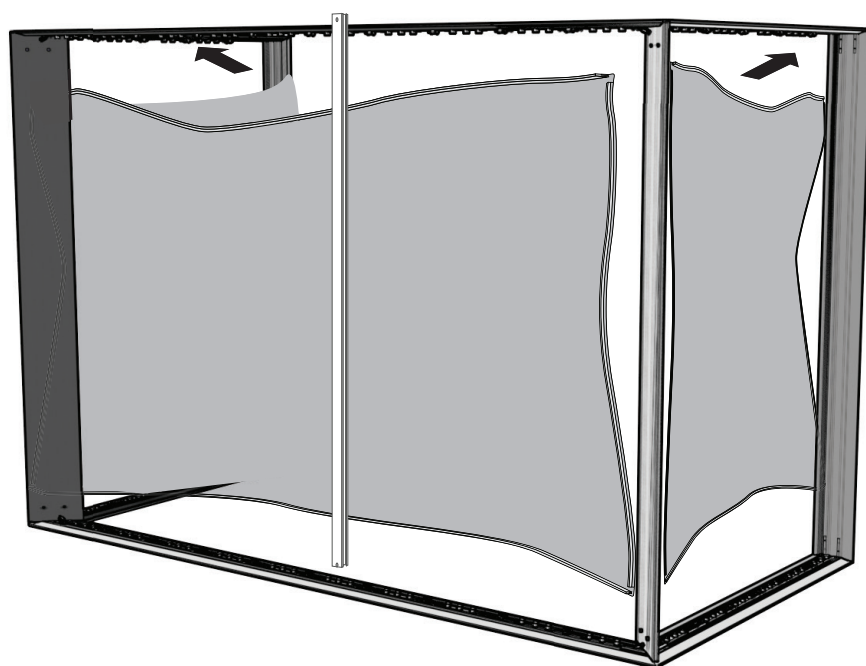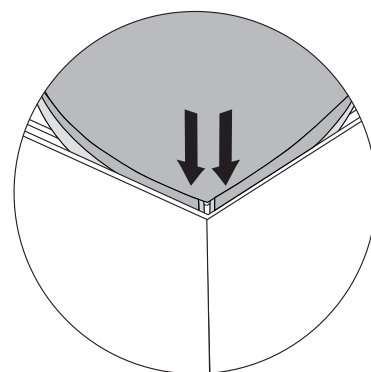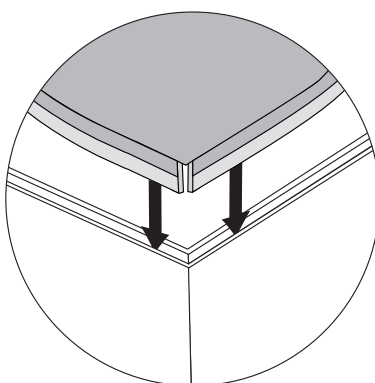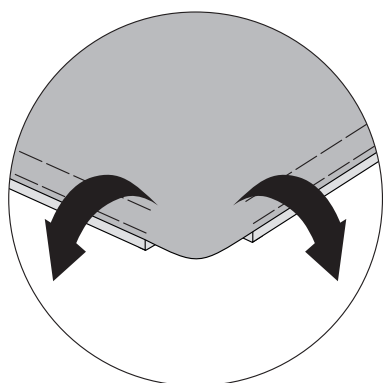

6

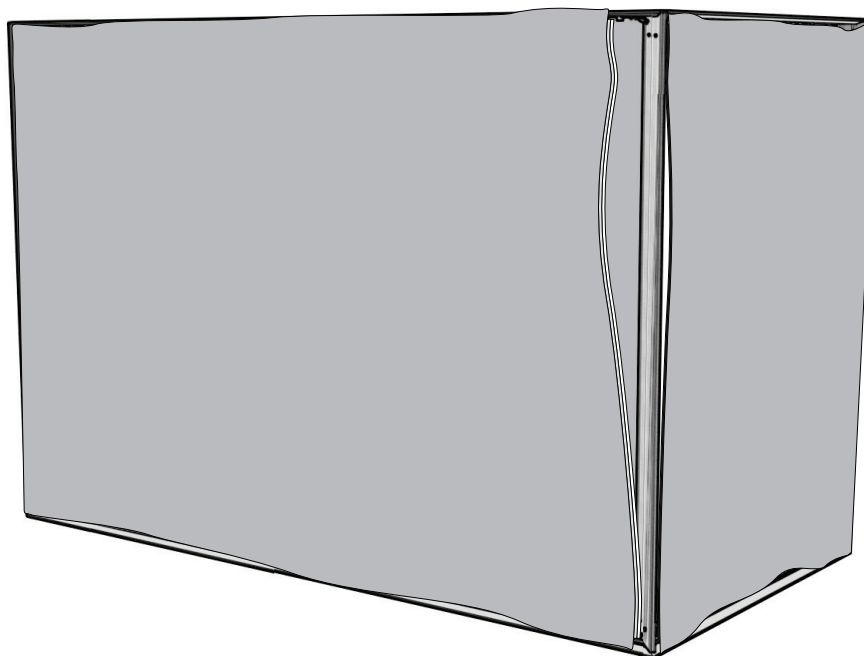

7

