




1

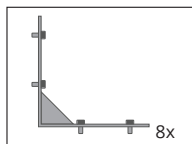

FK-0280 (1)

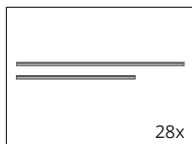

FK-0280 (2)

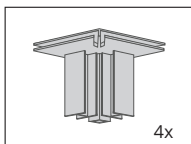

FK-0725




FK-0726

FK-0727


U-FORMATION CARRÉ 80

INSTALLING THE CORNERS

4x



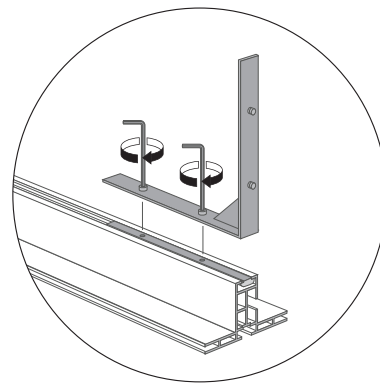
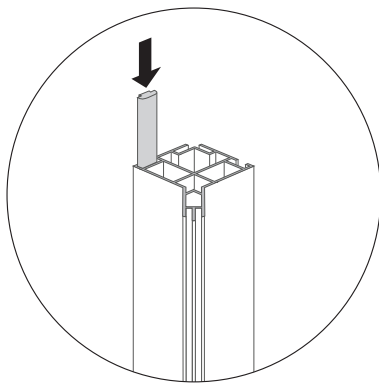
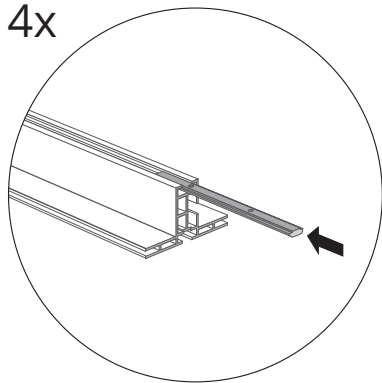


1x

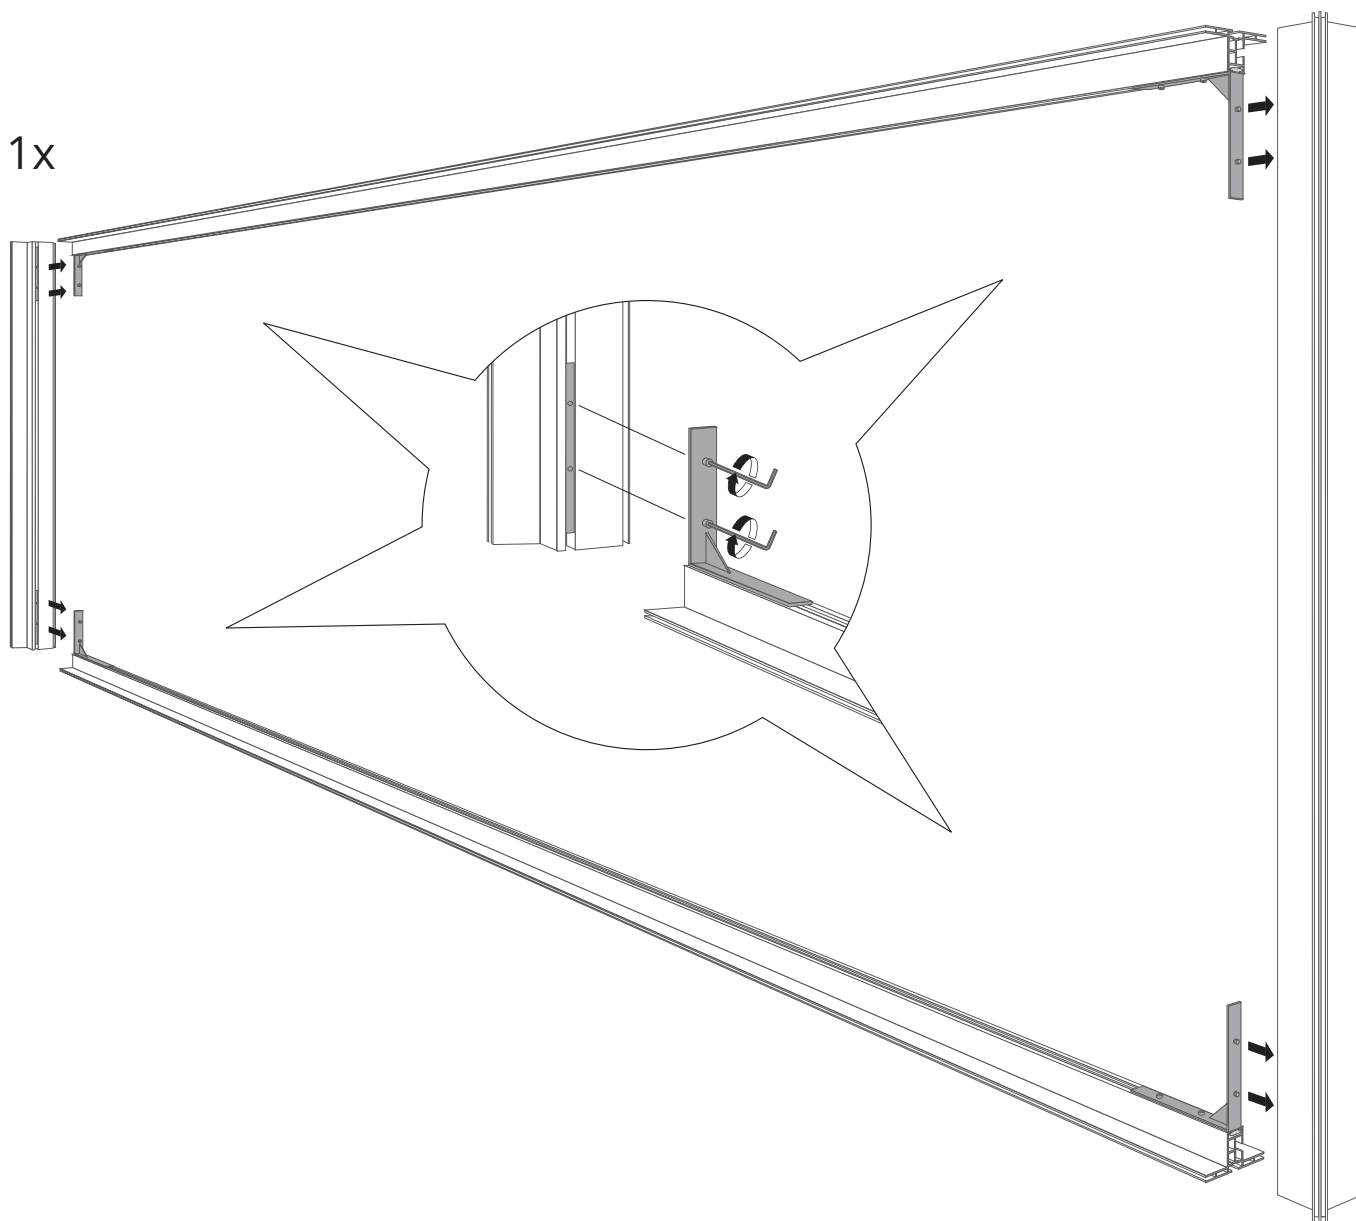


2

4x

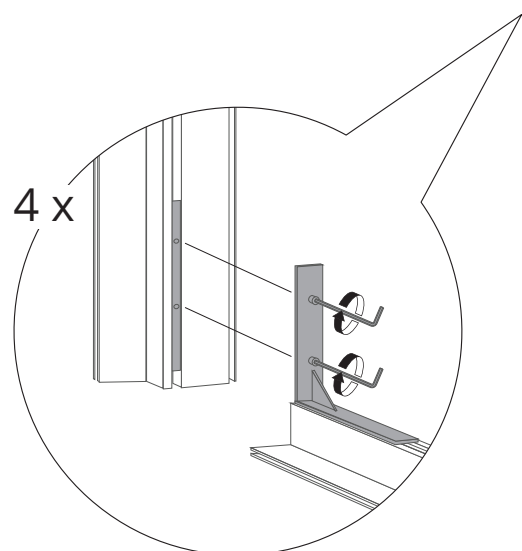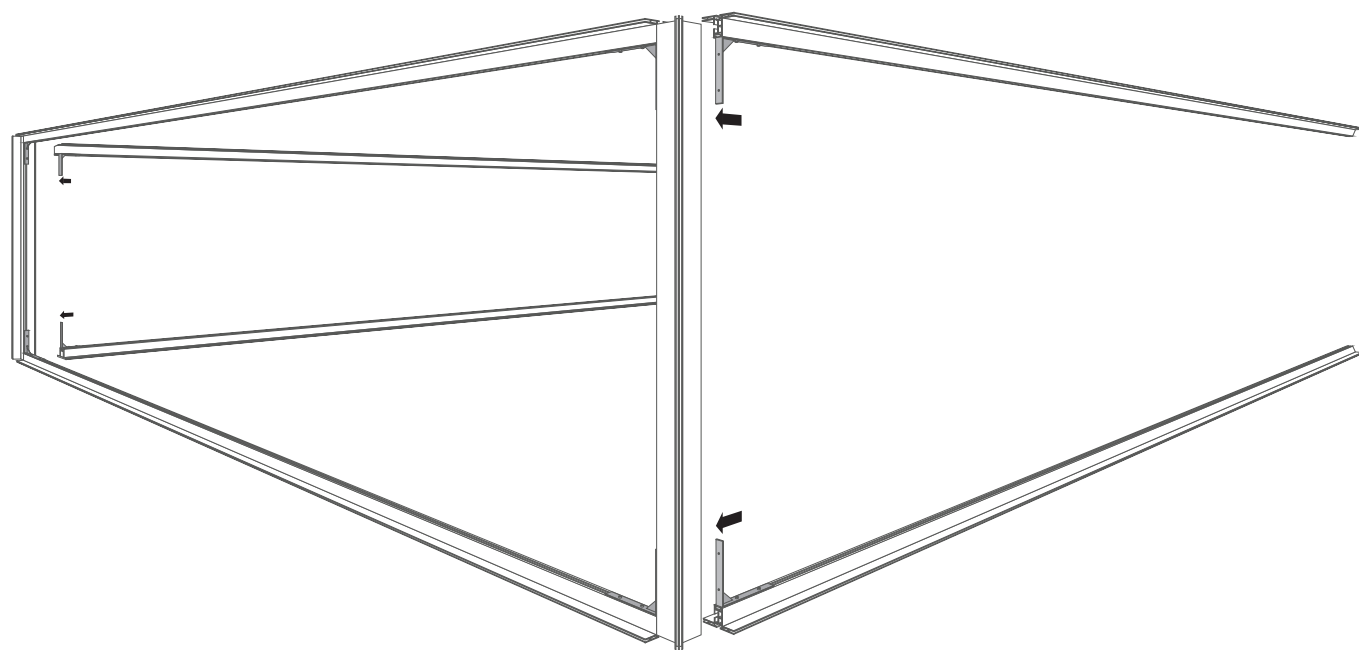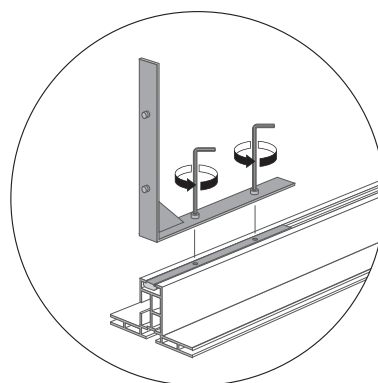
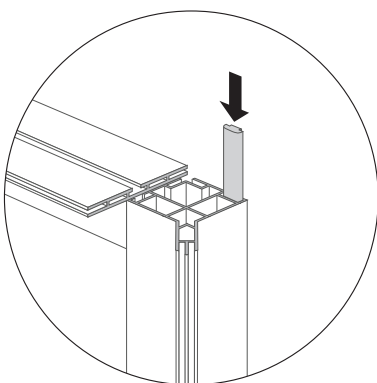
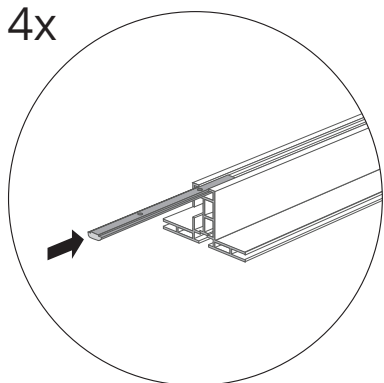


3

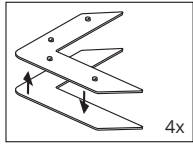


FK-0200





4x

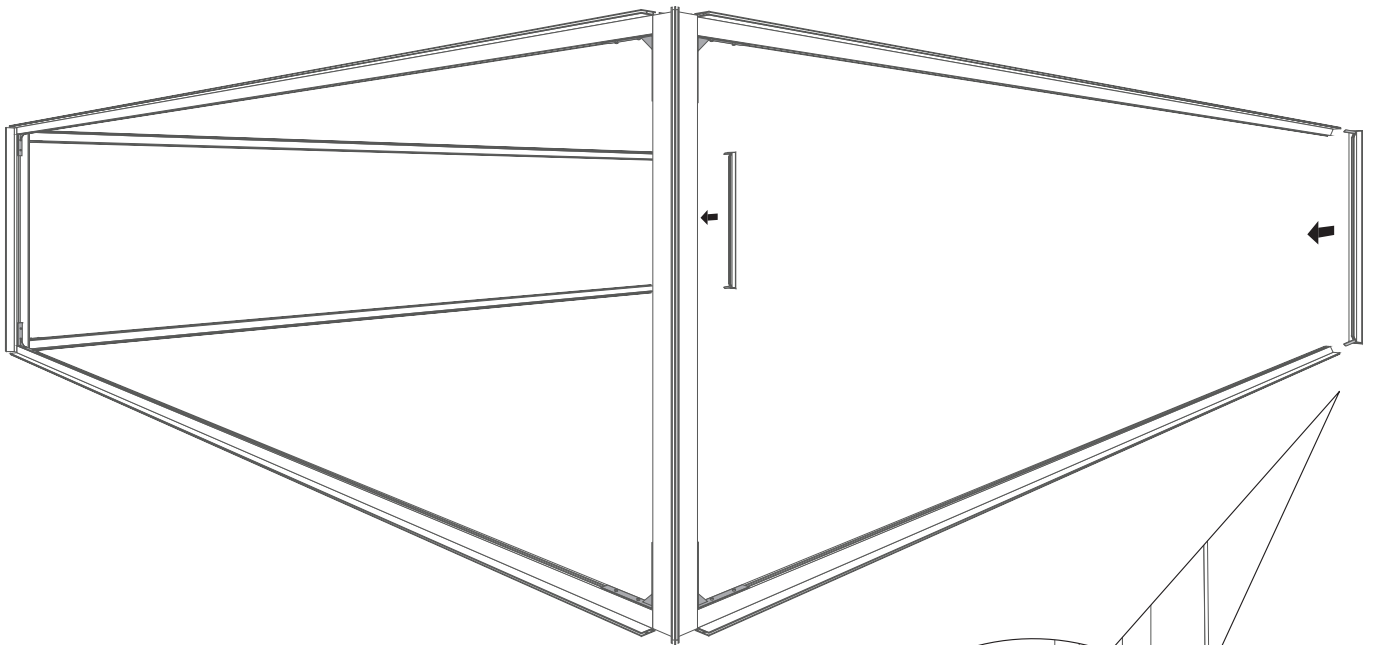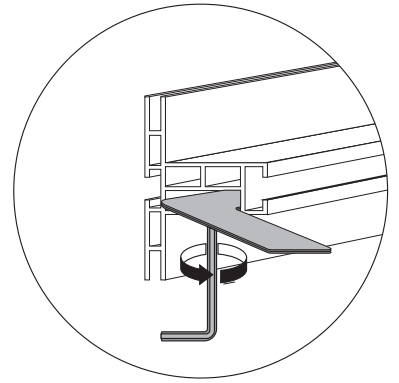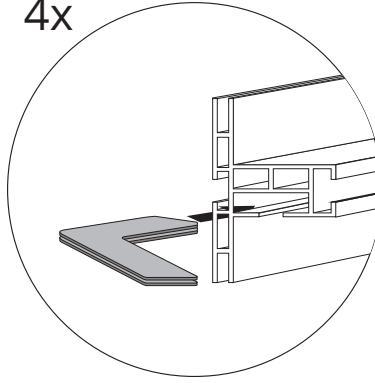


2x

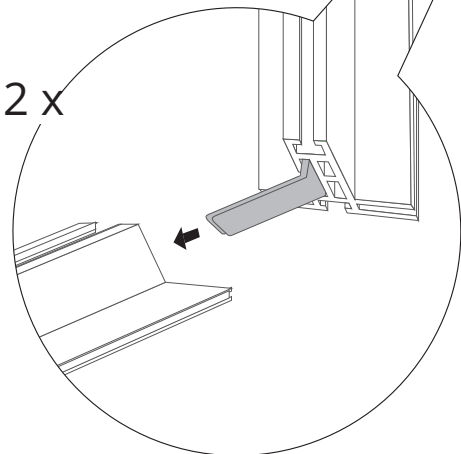


4

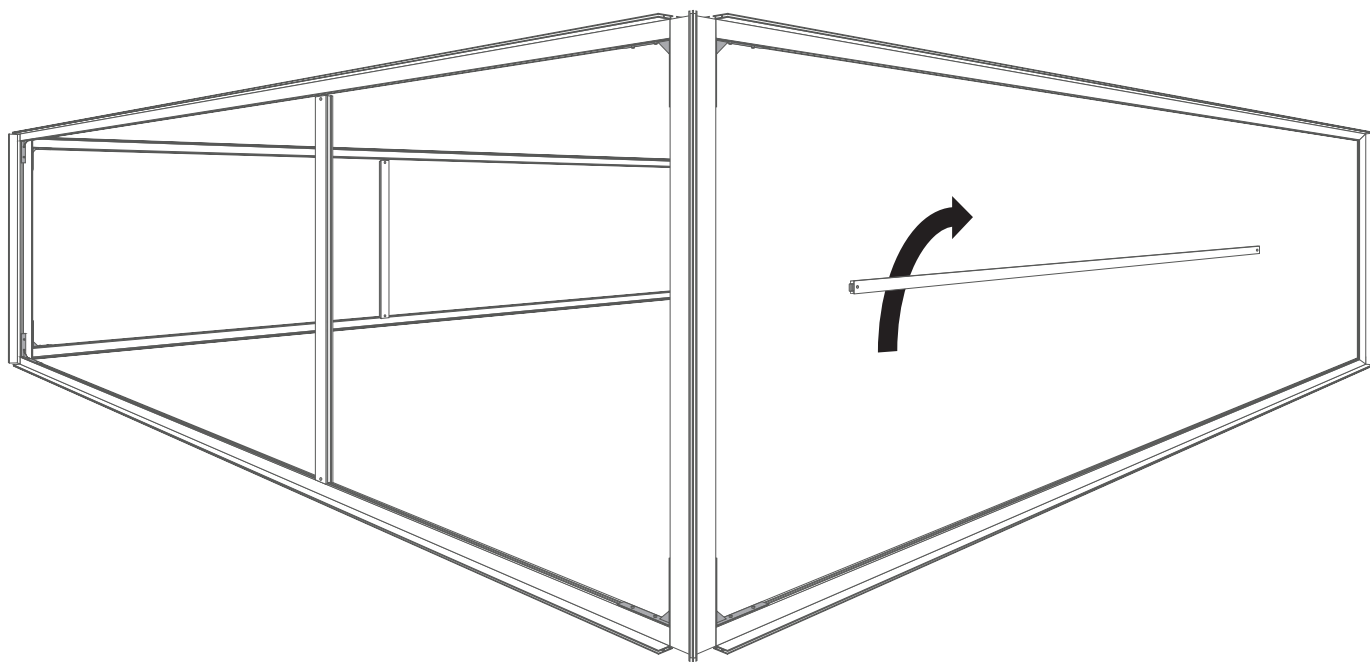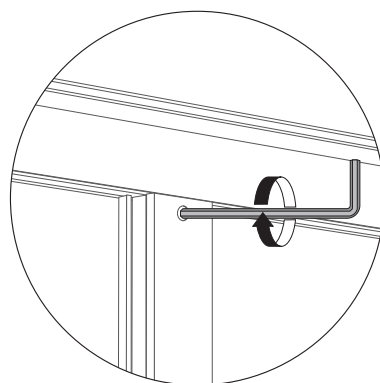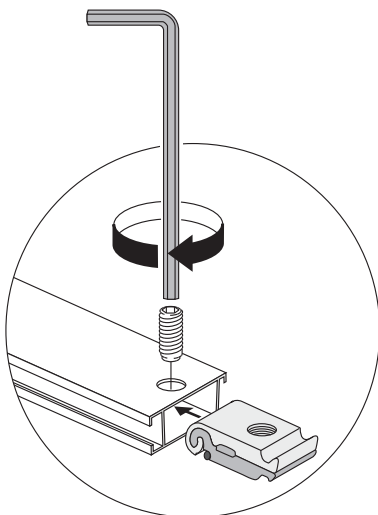
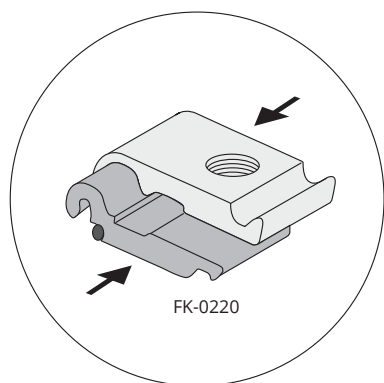


5

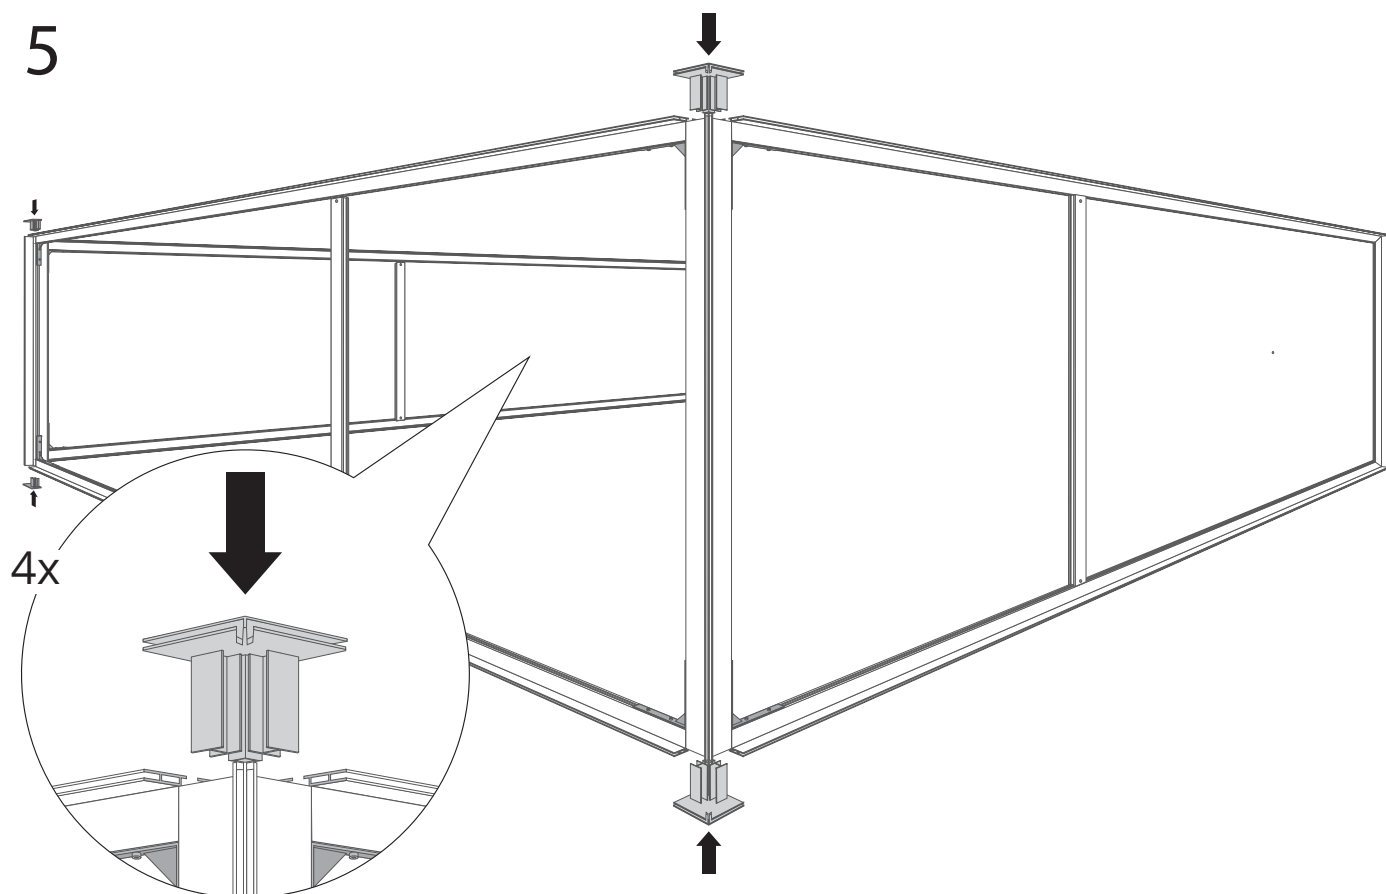


6

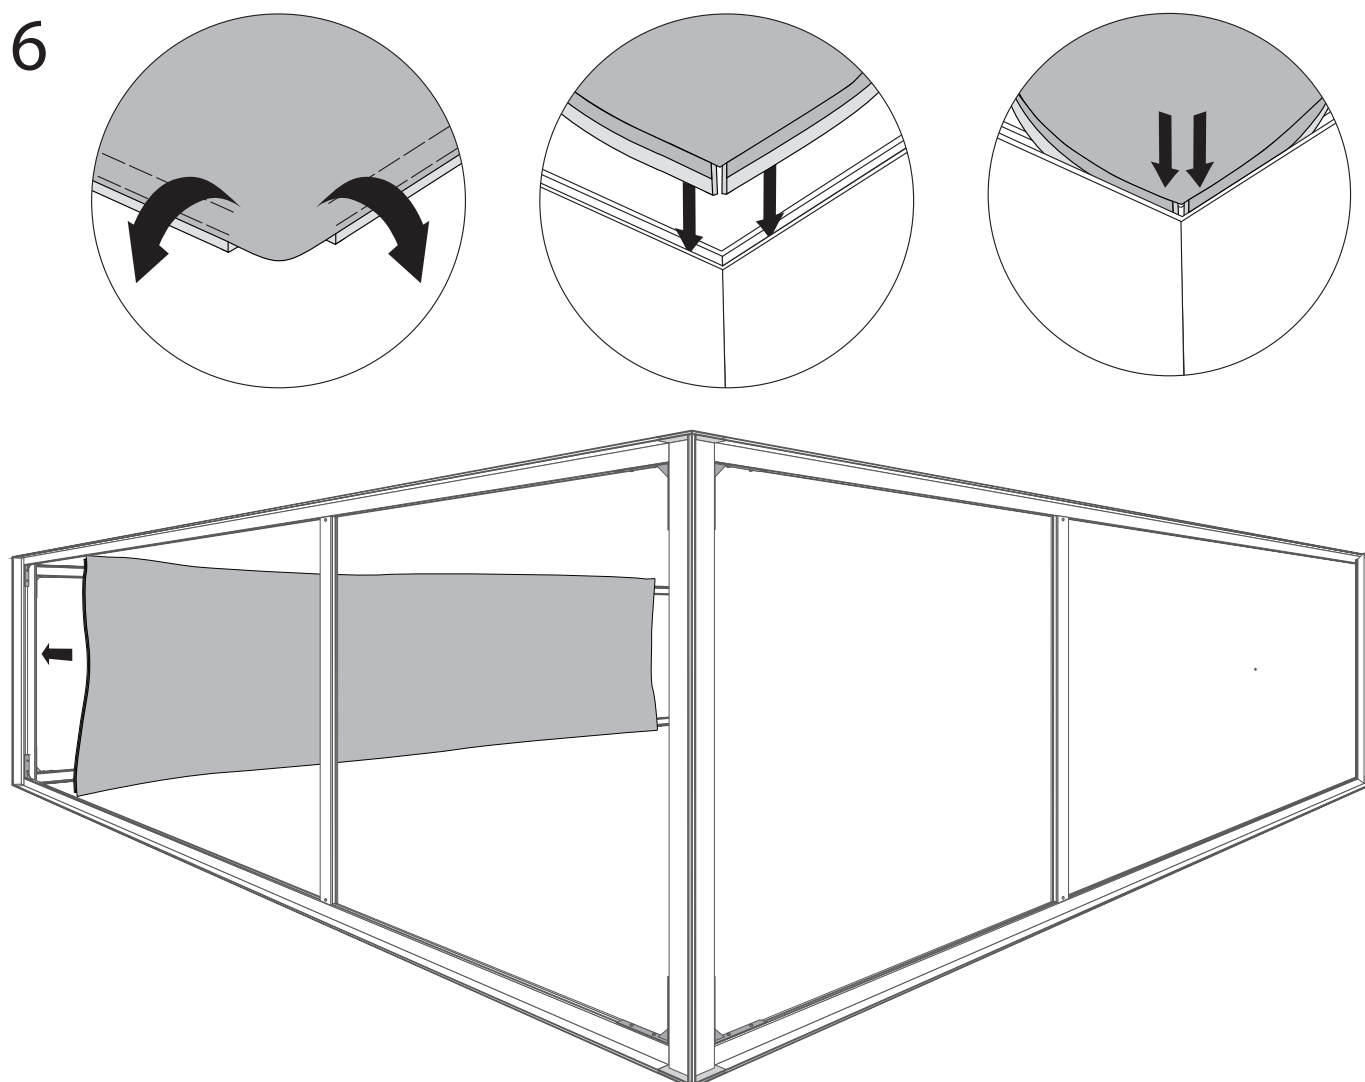

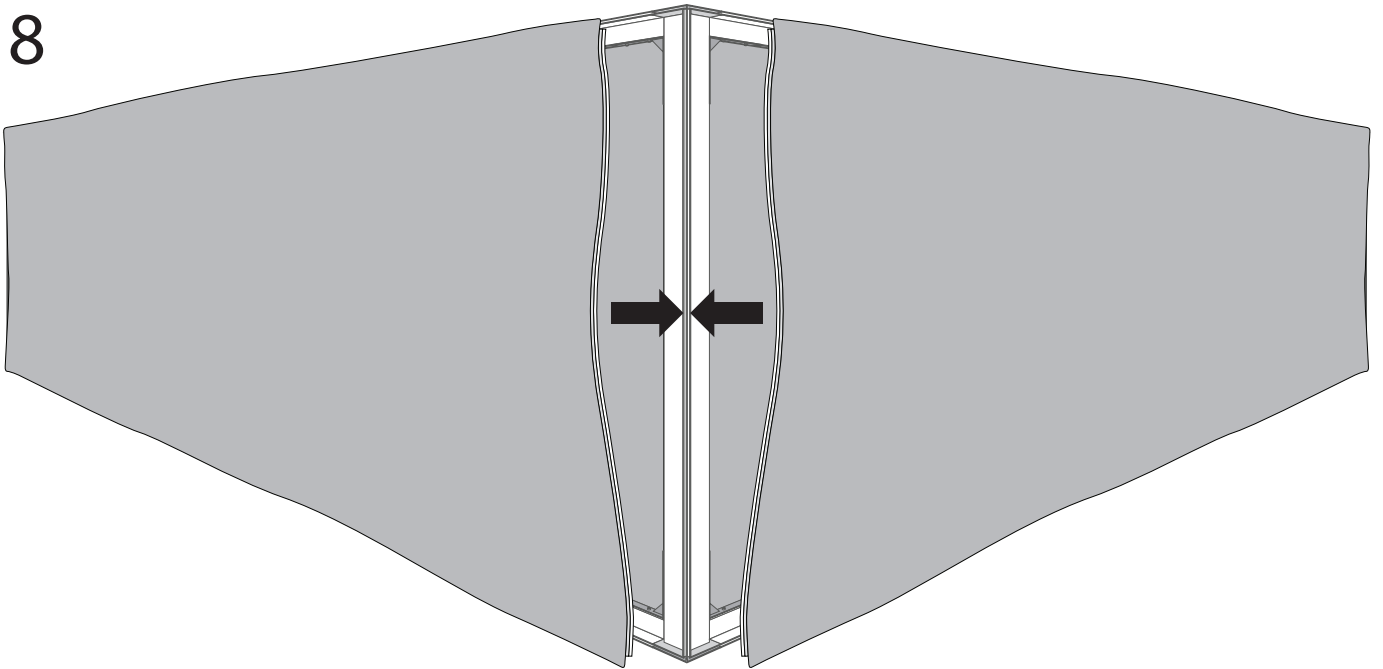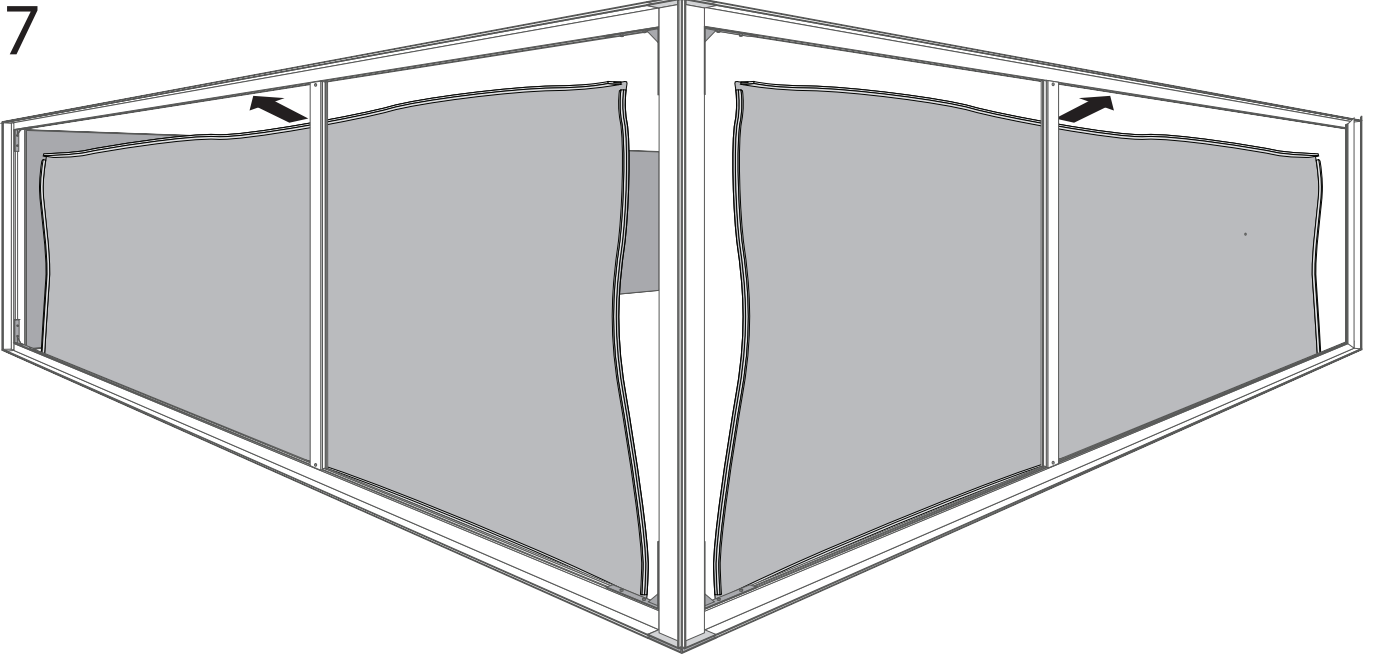

9

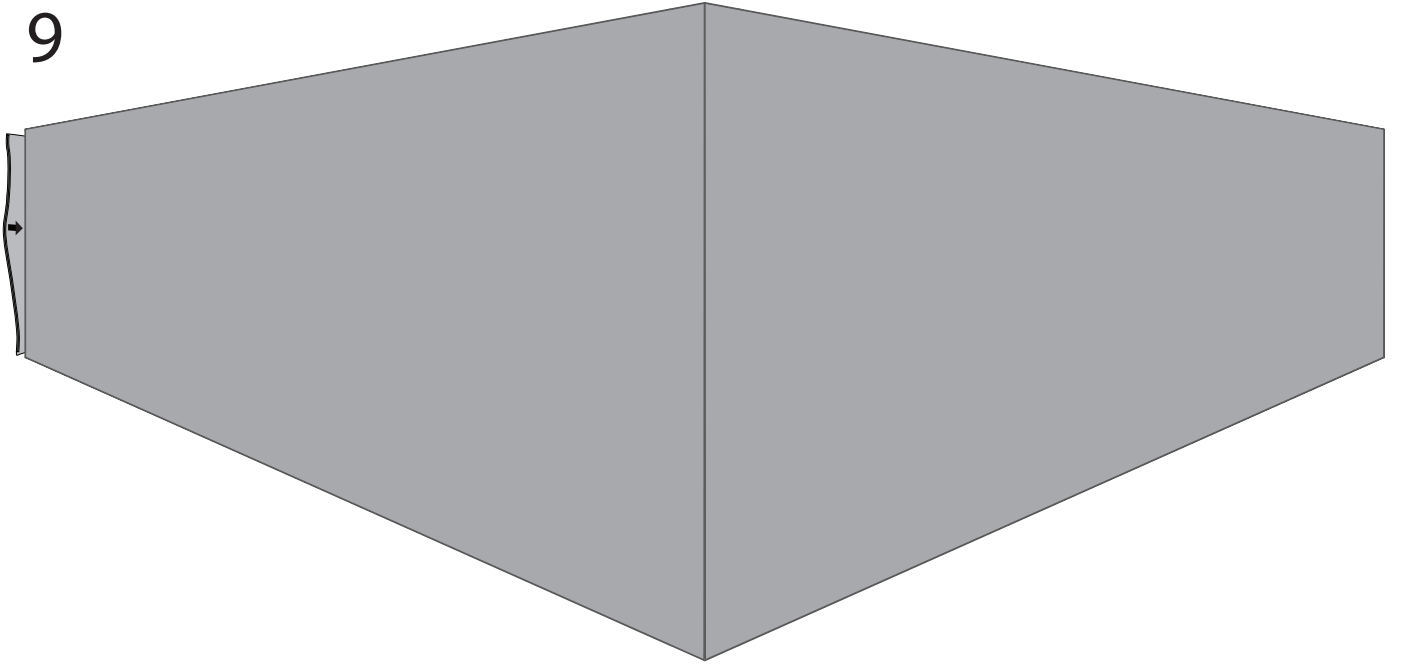

10

